

Fisher-Price®

BCV21
BCV22



Scan the QR code
below to download
the app



Learning
and
drawing
fun!

- 1** Download Create & Learn app.
Scan QR code below. App is also
available on the App StoreSM.

 
- 2** Turn device power on.
Unlock case, insert your
device and lock case.



- 3** Launch app.



- 4** Use key card to
unlock full app.





CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)
1300 135 312 (Australia)



service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.



Available on the
App Store

Apple, the Apple logo, and iPod are trademarks of Apple Inc., registered in the U.S. and other countries.
App Store is a service mark of Apple Inc.

©2013 Mattel. All Rights Reserved.

© and ™ designate U.S. trademarks of Mattel, except as noted.

 
Consumer Information

- Please keep these instructions for future reference, as they contain important information.
 - Adult setup is required. No tools required.
 - This product is compatible with the iPod Touch® 2nd, 3rd and 4th generation. Device not included.
- Note:** The Create & Learn app is compatible with the iPod Touch® 3rd and 4th generation only.
- Only use this product with your iPod Touch® properly inserted and locked in the case. Remove any other cases from the device before inserting it in this case.
 - Periodically check this product and your device for damage or cracks. Do not use if either is damaged or broken. Follow your iPod Touch® instructions for use and care.
 - Keep the unlock key card for future use. If you uninstall this app, you will need the key card again to unlock the full app.
 - Wipe this product with a clean, damp cloth. Do not immerse. Do not use alcohol or ammonia based cleaners on the screen protector.



You can access your device: sleep/wake, volume and side (mute/screen rotation) buttons through the openings in the back of the case.

Open the Case

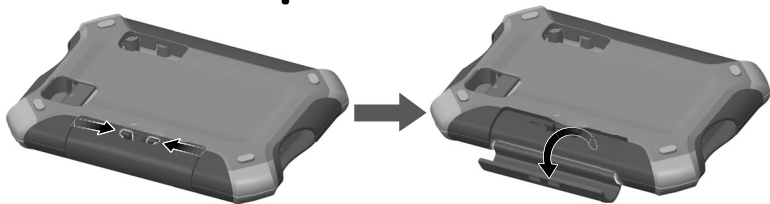


-
- At the same time, slide both latches on the back of the case inward.
 - Lower the tab.



-
- Turn the case over and lift the screen.


Stylus Use

 Hint: The stylus can be adjusted for left or right handed writers!

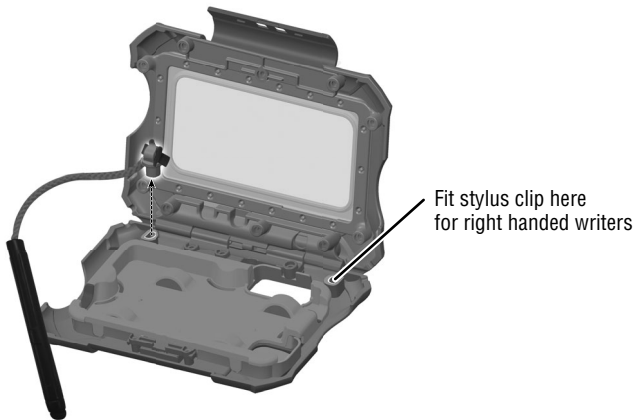


-
- To change the side of the stylus, lift to remove the the stylus clip from inside the case.
 - Fit the clip into the socket in the other side of the case.

 Insert Device and Close Case

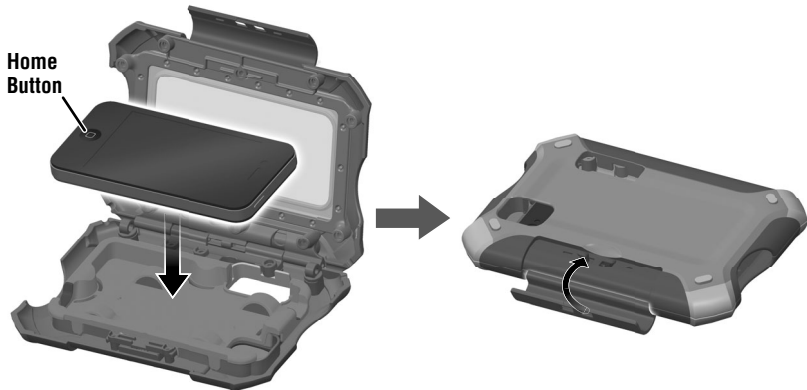


- Turn your device power ON.
- Insert the device with the camera on the same side as the camera opening in the case.
- Lower the screen. Turn the case face down and lift the tab to until it “snaps” into place.

 Unlock the Full App

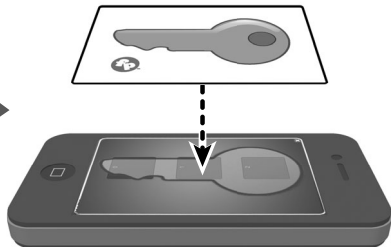

- The case comes with an unlock card to access the full app!
 - From the home screen, touch the play button (▶).
 - On the next two screens, touch UNLOCK.
 - Place the unlock key card on the screen, as shown. Then follow the directions to unlock the full app.
- IMPORTANT!** We recommend keeping the unlock key card for future use. If you uninstall this app, you will need the key card again to unlock the full app.

 
Create & Learn App

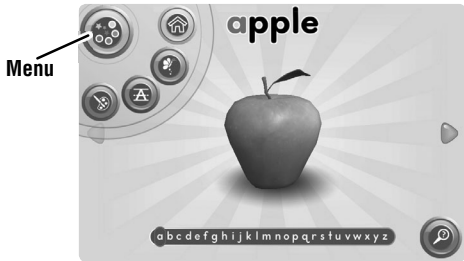



Hint: Touch the ⓘ to go to the app Settings menu. From the app Settings menu, you can: turn background music ON or OFF and adjust app volume. You will also find help.

 - From the home screen, touch the play button ▶.
- Touch the menu button ⚙ to choose an activity.
- Touch the palette button 🎨 for Create mode. Touch the A button Ⓐ for Learn mode. Touch the butterfly button 🦋 for Explore mode. Touch the house 🏠 to go back to the home screen.

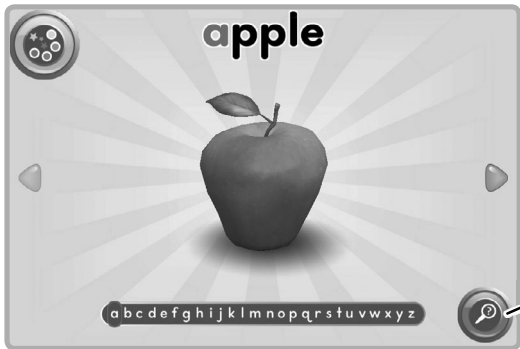
Explore Mode






Fun Facts

 
- Touch the arrows on the screen to explore the alphabet.
- Touch the screen for interactive fun!
- Touch magnifying glass button  to hear fun facts.
- Touch the card button  to use the cards.

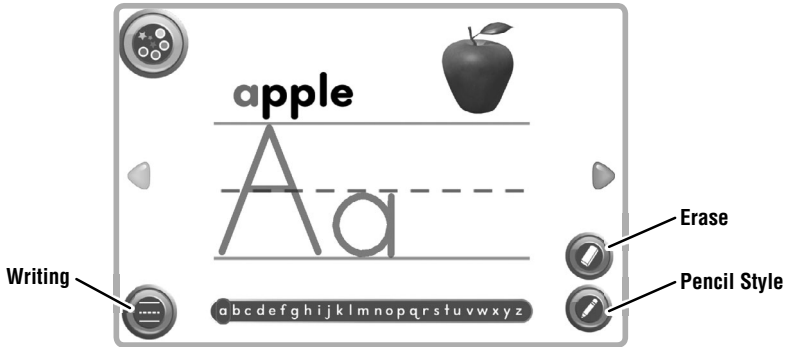
Learn Mode



- Use the stylus to practice writing letters on the screen!
- Touch the arrows to scroll through the alphabet.
- Touch the writing button  to choose structured or freestyle writing. Touch the eraser button  to erase writing. Touch the pencil button  to choose a pencil style.

 Create Mode

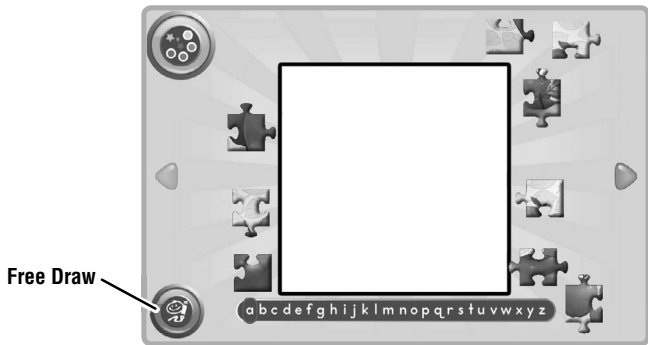

- Touch the arrows to explore the alphabet and play a different game or activity for each letter!
- Touch the free draw button  to draw your own pictures (see next page).

Create Mode



- Touch any of the tools on the right side of the screen to create your masterpiece!
- Touch the puzzle piece and brush button  for activities and games.