

Fisher-Price®

Singin' Snail Pail™

Instructions

Product Number 71922



Product features may vary from picture above.

 
Please save these instructions for future reference.

Batteries must be installed by an adult.


Requires two, alkaline "button cell" batteries (LR44 or equivalent) for operation (included).

Tool required for battery installation:
Phillips Screwdriver (not included).

Building and Shape-Sorting Fun!

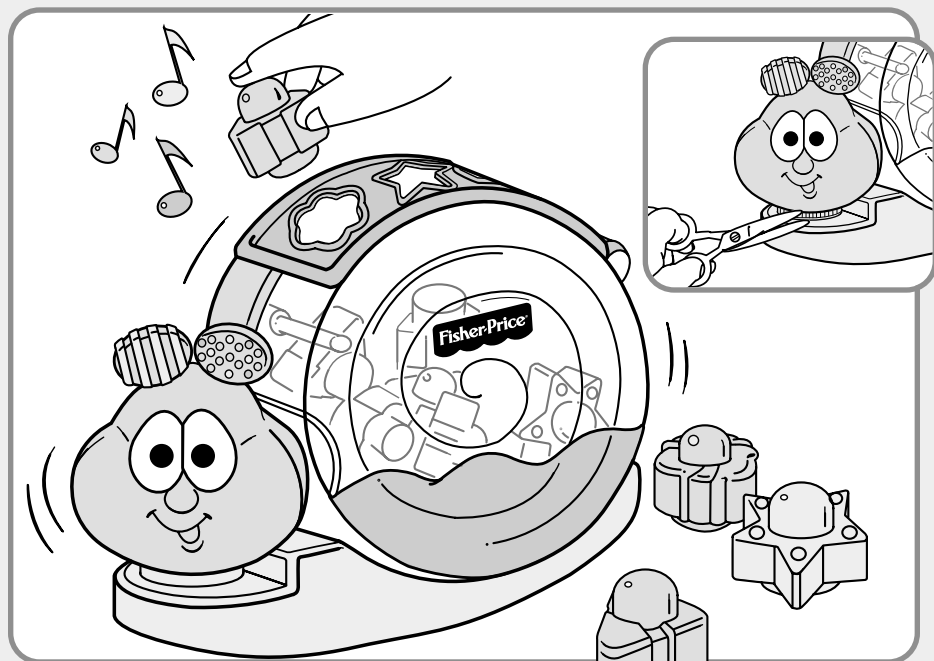

 - Using safety scissors, carefully cut the packing tie around the snail's head. Dispose of the packing tie properly.
- Rock the snail for music!

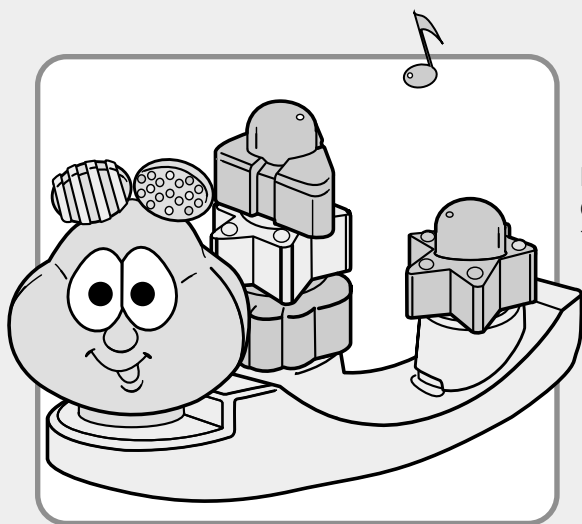

- Remove the shell and stack the blocks on the base.

 
Hint: If sound becomes faint or stops, it's time for an adult to replace the batteries!

Battery Replacement

Hint: We recommend the use of alkaline batteries for longer battery life.



1.5V X 2
(LR44 or equivalent)
SHOWN ACTUAL SIZE

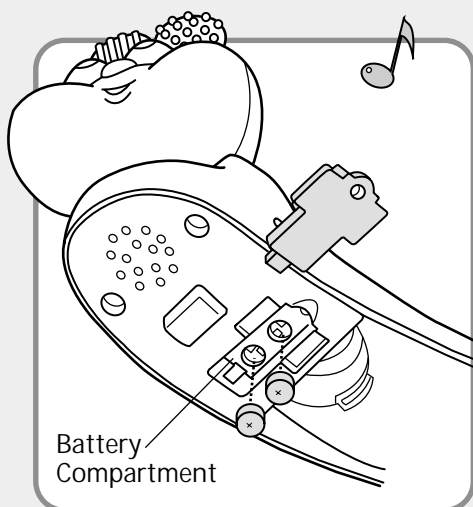

- Loosen the screw in the battery compartment door with a Phillips screwdriver.
- Remove the battery compartment door. Dispose of the worn batteries properly. Insert two, new, alkaline "button cell" batteries (LR44, or equivalent) in the battery compartment as shown. Make sure the flat side of each battery (printed with the battery designation) faces out.
- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.

Battery Tips

- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the toy. Battery leakage and corrosion can damage this toy. Dispose of batteries safely.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the Battery Replacement instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.

Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take the base apart.

FCC Note (United States only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.



Consumer Information

Questions?
We'd like to hear from you!

Call Fisher-Price® Consumer Affairs, toll-free at 1-800-432-KIDS, 8 AM - 5 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Affairs, 636 Girard Avenue, East Aurora, New York 14052.



www.fisher-price.com

In Canada, call 1-800-567-7724, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

In Great Britain, telephone 01628 50033.

In Australia, call the Fisher-Price Australian Consumer Advisory Service toll-free at 1-800-800-812, or write to: Fisher-Price, Mattel Pty. Limited, 461 Plummer Street, Port Melbourne, Victoria 3207.

Fisher-Price, Inc., a subsidiary of Mattel, Inc. East Aurora, New York 14052, U.S.A.

©2000 Mattel, Inc. All Rights Reserved.

® and ™ designate U.S. trademarks of Mattel, Inc.