

Fisher-Price®

H8158



Please keep this instruction sheet for future reference,
as it contains important information.

Requires three "AA" batteries (included).


Batteries included are for demonstration purposes only.

Adult assembly is required for battery replacement.

Tool required for battery replacement: Phillips screwdriver (not included).

www.fisher-price.co.uk

Battery Replacement

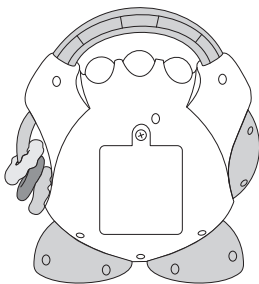


For best performance, we recommend replacing the batteries that came with this toy with three, new "AA" (LR6) alkaline batteries.

- Locate the battery compartment on the back of the toy.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door and dispose of them properly.
- Insert three "AA" (LR6) **alkaline** batteries.

Hint: We recommend using alkaline batteries for longer battery life.

- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power switch off and then back on.
- When lights or sounds from this toy become faint or stop, it's time for an adult to change the batteries!

 Battery Safety Information



In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Learning Fun for Baby!

Press to hear the animal identified.


Press to hear a nursery rhyme.

Press to hear the animal's sound.



- Slide the power/volume switch to ON with low volume , or ON with high volume  .

Hint: If your child is not actively playing with this toy, it turns off automatically (sleep mode).

- When finished playing with this toy, slide the power/volume switch to the OFF position  .

Press to spin the "CD" and change the animal in the window. Hear the animal identified, a nursery rhyme and the animal's sound.



Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

Great Britain: Vanwall Business Park, Maidenhead SL6 4UB.

Helpline: 01628 500303.

www.service.mattel.com/uk.

Mattel Europa B.V., Gondel 1, 1186MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Malaysia: Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ.
Tel: +603-3341 9052.