

# Fisher-Price®

J9632

Please keep this instruction sheet for future reference, as it contains important information.

Requires three "C" batteries (included).


Adult assembly is required.

Tool required for battery replacement: Phillips screwdriver (not included).





# Play a Song!

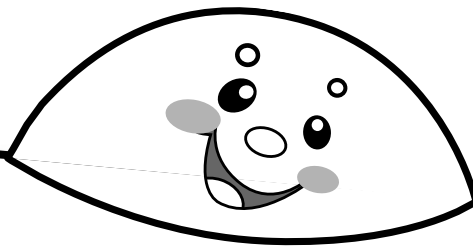


## The Silly Little Spider

The musical score for 'The Silly Little Spider' consists of six staves of music. Each staff begins with a treble clef and a key signature of one flat (B-flat). The notes are represented by eighth notes with stems, and each note is accompanied by a circled number indicating its fingering. The sequence of notes and fingerings across the staves is as follows:

- Staff 1: 5, 1, 1, 1, 2, 3, 3, 3, 2, 1, 2
- Staff 2: 3, 1, 5, 3, 3, 3, 4, 5, 5
- Staff 3: 5, 4, 3, 4, 5, 3, 1, 1, 1
- Staff 4: 2, 3, 3, 3, 2, 1, 2, 3, 1, 5
- Staff 5: 1, 1, 1, 2, 3, 3, 3, 2, 1, 2
- Staff 6: 3, 1

## Battery Replacement

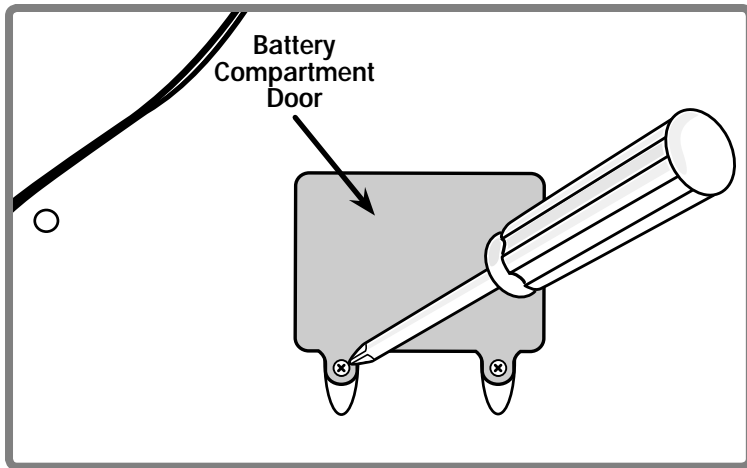

**For best performance, we recommend replacing the batteries that came with this toy with three, new "C" (LR14) alkaline batteries.**

- Locate the battery compartment on the underside of the piano.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Remove the worn batteries and throw them away.
- Insert three "C" (LR14) **alkaline** batteries, as indicated inside the battery compartment.


**Hint:** We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screws. Do not over-tighten.
- If this toy begins to operate erratically you may need to reset the electronics. Slide the power/mode switch off and then back on.
- When sounds, lights or motions from this toy become faint or stop, it's time for an adult to change the batteries!



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

## Battery Safety Information

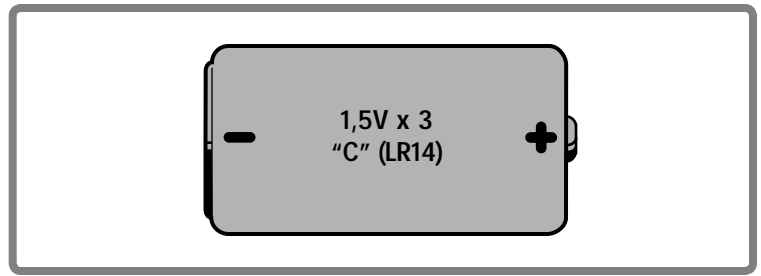

**In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product.**

**To avoid battery leakage:**

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

## Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.

## Consumer Information

**Great Britain:** Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303. [www.service.mattel.com/uk](http://www.service.mattel.com/uk).

**Australia:** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

**New Zealand:** 16-18 William Pickering Drive, Albany 1331, Auckland.

**Asia:** Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

**Malaysia:** Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel: 03-78803817, Fax: 03-78803867.