


# Quick Start

---

- 1 Turn power on  
and select  
swing speed



- 2 Push seat to  
start swinging

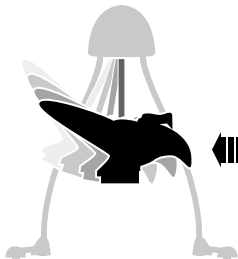

← PUSH

- 3 Select music 😊 😄 ,  
sounds 🎛️ 💧 or  
mobile 📶

Fisher Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.  
©2011 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S.  
trademarks of Mattel, Inc.