

Fisher-Price®

T4654



Please keep these instructions for future reference,
as they contain important information.

Requires three “AA” batteries (included) for operation.

Batteries included are for demonstration purposes only.

Adult assembly is required.

Tool required for assembly: Phillips screwdriver (not included).

Wipe this toy with a clean cloth dampened with a mild soap and
water solution. Do not immerse this toy.

This toy has no consumer serviceable parts. Do not take this toy apart.

fisher-price.com

Assembled Parts



Backboard



Bracket



Post



Base




2 Feet


Assembly

 **CAUTION**

This package contains small parts. For adult assembly only.

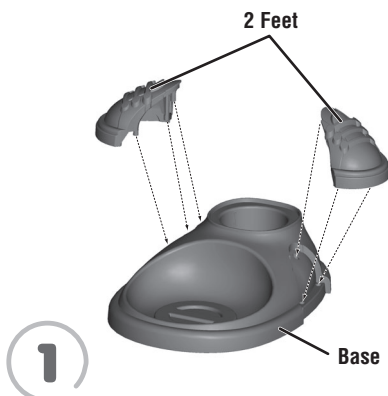

- Fit the feet onto the base, as shown.
Hint: The feet are designed to fit onto the base one way. If they do not seem to fit, turn them around and try again!

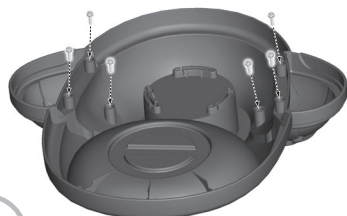

BOTTOM VIEW

- Turn the base assembly over and insert six screws into the holes in the base. Tighten the screws.




#6 x 5/8" (1,6 cm) Screw – 6

SHOWN ACTUAL SIZE

Tighten and loosen all screws with a Phillips screwdriver. Do not over-tighten.

Assembly


3

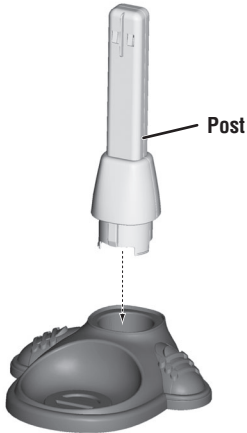

- Turn the base assembly upright.
- Fit the post into the base. Push to “snap” the post in place. Pull up on the post to be sure it's secure.

Hint: The post is designed to fit into the base one way. If it does not seem to fit, turn it around and try again.

4

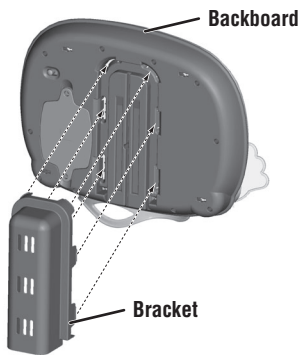


- Fit the tabs on the bracket into the slots on the back of the backboard.
- Push to “snap” the bracket in place. **3**

5



- Slide the backboard assembly onto the post.

Battery Replacement

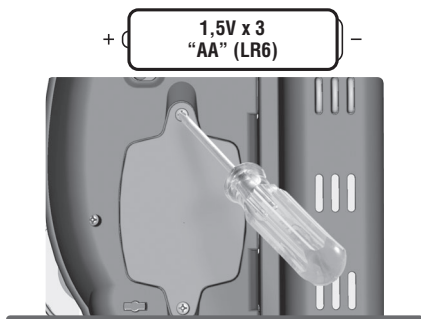

For best performance, we recommend replacing the batteries that came with this toy with three, new “AA” (LR6) alkaline batteries.

- Locate the battery compartment on the back of the toy.
- Loosen the screws in the battery compartment door and remove the door.
- Remove the exhausted batteries and dispose of them properly.
- Insert three, new “AA” (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screws.
- If this product begins to operate erratically, you may need to reset the electronics. Slide the power/mode switch off and back on.
- When sounds and lights from this toy become faint or stop, it's time for an adult to change the batteries.




- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:


- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Height Adjust

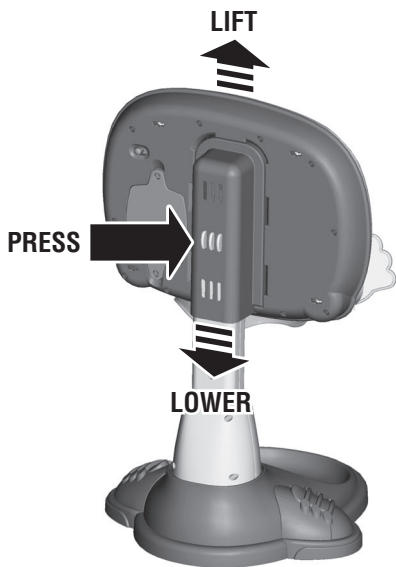

- The backboard can be adjusted to three different heights.
- Press the button on the back of the post and slide the backboard all the way down for Sit & Play or all the way up for Stand & Shoot.

Learning Fun is a Slam Dunk!

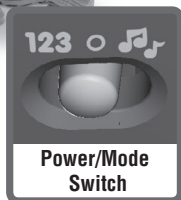

- Slide the power/mode switch to learning **123** or music 🎵 mode.
 - Slide the volume switch to low volume 🔊 or high volume 🔊.
- ### 123 Learning
- Throw the basketball through the hoop. Count how many baskets you can score!
 - Push the hoop for fun phrases and songs.
 - Press the buttons on the backboard to learn colors, shapes and numbers!
- ### 🎵 Music
- Throw the basketball through the hoop, push the hoop or press the buttons for fun songs and lights!
 - When you are finished playing with this toy, slide the power/mode switch **5 OFF O**.

Consumer Information



CONSUMER ASSISTANCE
1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303. www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

ICES-003

This Class B digital apparatus complies with Canadian ICES-003. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

NMB-003

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.