



**Please keep this instruction sheet for future reference,  
as it contains important information.**

**Requires three "AA" batteries (included) for operation.**

**Adult assembly is required for battery replacement.**

 
**Tool required for battery replacement: Phillips screwdriver (not included)**

**Wipe this toy with a clean cloth. Do not immerse.**

**This toy has no consumer serviceable parts. Please do not take this toy apart.**

## Battery Replacement

For best performance, we recommend replacing the batteries that came with this toy with three, new "AA" (LR6) alkaline batteries.

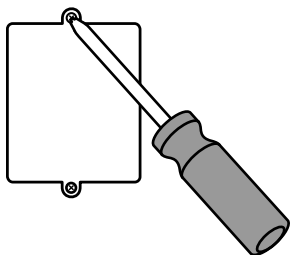

- Locate the battery compartment door on the bottom of the toy.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Remove the exhausted batteries and dispose of them properly.
- Insert three, new "AA" (LR6) **alkaline** batteries.


**Hint:** We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screws. Do not over-tighten.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and then back on.
- When sounds or lights from this toy become faint or stop, it's time for an adult to change the batteries.



• Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).


## Battery Safety Information

 

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

### 3 Interactive Play Modes!

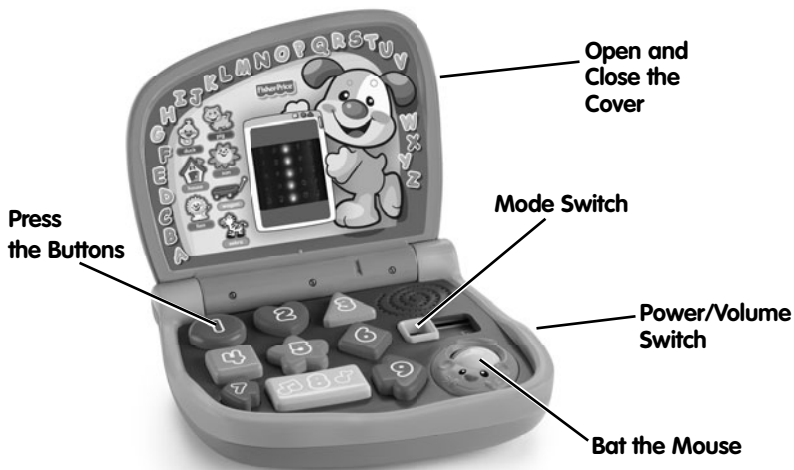 

- Slide the power/volume switch to ON with low volume 🔊 or ON with high volume 🔊. When you are finished playing with this toy, slide the power/volume switch OFF ⏻.
- Slide the mode switch to:
  - 🧠 **Learning**
  - 🎵 **Music**
- 🧠 **Learning** – Press any of the buttons to learn shapes, colours and numbers! Bat the mouse to hear the alphabet. Open and close the cover to learn about opposites!
- 🎵 **Music** – Press any of the buttons to play fun tunes. Bat the mouse to hear songs! Open and close the cover to start or stop the music.



**Great Britain:** Vanwall Business Park,  
Maidenhead SL6 4UB.  
Helpline: 01628 500303.  
[www.service.mattel.com/uk](http://www.service.mattel.com/uk).

**Australia:** Mattel Australia Pty. Ltd.,  
658 Church Street, Locked Bag #870,  
Richmond, Victoria 3121 Australia.  
Consumer Advisory Service 1300 135 312.

**New Zealand:** 16-18 William Pickering  
Drive, Albany 1331, Auckland.

**Asia:** Mattel East Asia Ltd, Room 1106,  
South Tower, World Finance Centre,  
Harbour City, Tsimshatsui, HK, China.

**Malaysia:** Diimport & Diedarkan Oleh:  
Mattel SEA Ptd Ltd. (993532-P) Lot 13.5,  
13th Floor, Menara Lien Hoe, Persiaran  
Tropicana Golf Country Resort, 47410 PJ.  
Tel: +603-3341 9052.  
Mattel Europa, B.V., Gondel 1, 1186 MJ  
Amstelveen, Nederland.