

Fisher-Price®



Please keep this instruction sheet for future reference,
as it contains important information.

Requires six "AA" batteries (included) for operation.


Adult assembly is required for battery replacement. Required tool:
Phillips screwdriver (not included).

Wipe this toy with a clean, damp cloth. Do not immerse.
This toy has no consumer serviceable parts. Do not take this toy apart.

Actual product may appear different from the photos shown.

www.fisher-price.co.uk

Battery Replacement

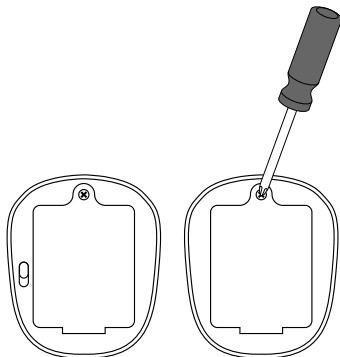

 
For best results, we recommend replacing the batteries that came with this toy with six, new "AA" (LR6) alkaline batteries.

- Locate the battery compartments on the bottom of each foot.
- Loosen the screw in each battery compartment door with a Phillips screwdriver. Remove each battery compartment door. Remove the exhausted batteries and dispose of them properly.
- Insert six, new "AA" (LR6) **alkaline** batteries.
- Replace each battery compartment door and tighten each screw. Do not over-tighten.
- If the toy begins to operate erratically you may need to reset the electronics. Slide the power/volume switch on the bottom of the toy off and then back on.
- When sounds or motion become faint or stop, it's time for an adult to change the batteries!



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.




Battery Safety Information



In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:


- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Let's Dance and Play Games!

- Slide the power/volume switch on the bottom of the puppy's foot to ON with low volume , ON with high volume  or OFF .




Learning

- Press the  button on puppy's foot for learning, dancing, clapping and more!



Let's Play

- Press the  button on puppy's other foot to dance, wiggle and sing-along!



Great Britain: Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628
500303. www.service.mattel.com/uk.
Mattel Europa B.V., Gondel 1,
1186MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd.,
658 Church Street, Locked Bag #870,
Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering
Drive, Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106,
South Tower, World Finance Centre,
Harbour City, Tsimshatsui, HK, China.

Malaysia: Diimport & Diedarkan Oleh:
Mattel SEA Ptd Ltd. (993532-P) Lot 13.5,
13th Floor, Menara Lien Hoe, Persiaran
Tropicana Golf Country Resort, 47410 PJ.
Tel: +603-3341 9052.