

**Fisher-Price®**



Please keep this instruction sheet for future reference,  
as it contains important information.

Requires three "AA" batteries (included) for operation.

Batteries included are for demonstration purposes only.


Adult assembly is required. Tool required for battery replacement:  
Phillips screwdriver (not included)

Wipe this toy with a clean damp cloth. Do not immerse.

This toy has no consumer serviceable parts. Do not take apart.

**[www.fisher-price.co.uk](http://www.fisher-price.co.uk)**

## Battery Replacement

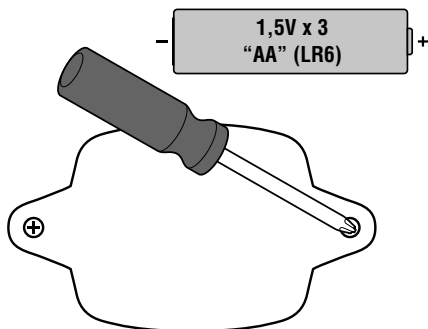

**For best performance, we recommend replacing the batteries that came with this toy with three new "AA" (LR6) alkaline batteries.**

- Loosen the screw in the battery compartment door with a Phillips screwdriver and remove the door.
- Remove the exhausted batteries and dispose of them properly.
- Insert three new "AA" (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw. Do not over-tighten.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and back on.
- When sounds or lights become faint or stop, it's time for an adult to change the batteries.




- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

## Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

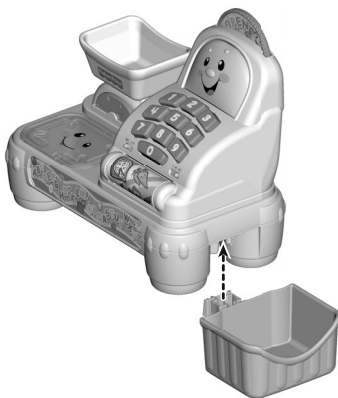

## Assembly



- Fit the tab on the basket into the slot under the cash register. Push to **"snap"** in place.


## 3 Fun Play Modes!



- Slide the power/volume switch to ON with low volume  or ON with high volume .
- Slide the mode switch to:
  - ABC Learning Mode** – Press the buttons to learn numbers and hear sound effects! Turn the sign to “open” and “close” the market. Spin the roller to hear a song. Press the scale to hear more songs and phrases. “Scan” items to hear fun phrases.

**♪ Music Mode** – Press the buttons to play a musical note. Turn the sign, spin the roller or press the scale to hear a song. “Scan” items to hear fun sound effects.

**🌀 Imagination Mode** – Hear lots of fun sound effects when you press the buttons or scale, turn the sign, spin the roller or “scan” your items!

- When you are finished playing with this toy, slide the power/volume switch OFF .



**Great Britain:** Vanwall Business Park,  
Maidenhead SL6 4UB. Helpline: 01628 500303.  
[www.service.mattel.com/uk](http://www.service.mattel.com/uk).

Mattel Europa B.V., Gondel 1, 1186MJ  
Amstelveen, Nederland.

**Australia:** Mattel Australia Pty. Ltd.,  
658 Church Street, Locked Bag #870,  
Richmond, Victoria 3121 Australia.  
Consumer Advisory Service 1300 135 312.

**New Zealand:** 16-18 William Pickering Drive,  
Albany 1331, Auckland.

**Asia:** Mattel East Asia Ltd, Room 1106,  
South Tower, World Finance Centre,  
Harbour City, Tsimshatsui, HK, China.

**Malaysia:** Diimport & Diedarkan Oleh:  
Mattel SEA Ptd Ltd. (993532-P) Lot 13.5,  
13th Floor, Menara Lien Hoe, Persiaran  
Tropicana Golf Country Resort, 47410 PJ.  
Tel: +603-3341 9052.