

# Fisher-Price®



Please keep this instruction sheet for future reference,  
as it contains important information.

Requires three "AA" batteries (included) for operation. Batteries included  
are for demonstration purposes only.

Adult assembly is required for battery replacement.

 
Tool required: Phillips screwdriver (not included)

Wipe this toy with a clean, damp cloth. Do not immerse.

This toy has no consumer serviceable parts. Do not take apart.

**[www.fisher-price.co.uk](http://www.fisher-price.co.uk)**

## Battery Replacement

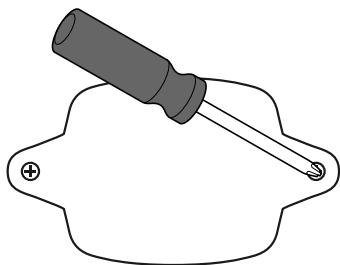


**For best performance, we recommend replacing the batteries that came with this toy with three, new “AA” (LR6) alkaline batteries.**

- Loosen the screws in the battery compartment door with a Phillips screwdriver and remove the door.
- Remove the exhausted batteries and dispose of them properly.
- Insert three, new “AA” (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screws. Do not over-tighten.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power/mode switch off and back on.
- When sounds or lights become faint or stop, it’s time for an adult to change the batteries.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

 
## Battery Safety Information

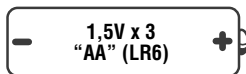

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

# Cheerful Music & Dancing Lights!

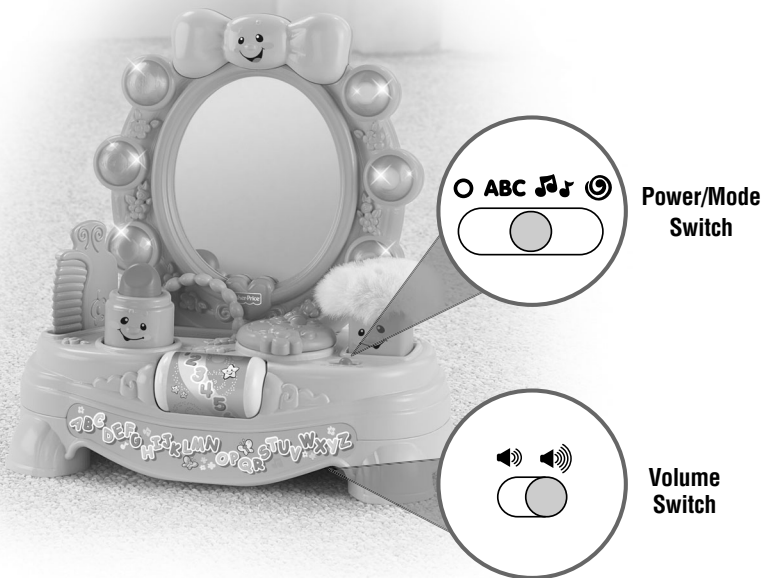 

- Slide the power/mode switch to **ABC Learning**, **Music**, **Imagination** or **OFF**.
- Slide the volume switch to **low** or **high volume**.

## **ABC Learning Mode**

Spin the roller to hear a song. Open and close the compact to learn about opposites or hear a song. Learn about colours, textures and phrases when you pick up or replace the comb, lipstick or powder puff.

## **Music Mode**

Spin the roller to hear a song. Open the compact to hear a song about getting ready. Close the compact to stop the song. Pick up or replace the comb, lipstick or powder puff to hear a tune.

## **Imagination Mode**

Spin the roller to hear fun tunes. Open and close the compact to hear phrases and sound effects. Hear even more fun phrases when you pick up or replace the comb, lipstick or powder puff!



**Great Britain:** Vanwall Business Park,  
Maidenhead SL6 4UB. Helpline: 01628  
500303. [www.service.mattel.com/uk](http://www.service.mattel.com/uk).  
Mattel Europa B.V., Gondel 1,  
1186MJ Amstelveen, Nederland.

**Australia:** Mattel Australia Pty. Ltd.,  
658 Church Street, Locked Bag #870,  
Richmond, Victoria 3121 Australia.  
Consumer Advisory Service 1300 135 312.

**New Zealand:** 16-18 William Pickering  
Drive, Albany 1331, Auckland.

**Asia:** Mattel East Asia Ltd, Room 1106,  
South Tower, World Finance Centre,  
Harbour City, Tsimshatsui, HK, China.

**Malaysia:** Diimport & Diedarkan Oleh:  
Mattel SEA Ptd Ltd. (993532-P) Lot 13.5,  
13th Floor, Menara Lien Hoe, Persiaran  
Tropicana Golf Country Resort, 47410 PJ.  
Tel: +603-3341 9052.