

Fisher-Price®

W9897



fisher-price.com

Consumer Information

 
 
WARNING

Prevent Entanglement Injury

- This product may not attach to all crib designs. Do not add additional strings or straps to attach to a crib or playpen.
 - Use **ONLY** attached to a crib or playpen.
-
- Please keep this instruction sheet for future reference, as it contains important information.
 - This product includes four “AA” batteries in a disposable box. Batteries included are for demonstration purposes only. Before first time use, remove the “AA” batteries and the disposable box and dispose of them properly.
 - Requires four “C” (LR14) **alkaline** batteries (not included) for operation.
 - Adult assembly is required for battery replacement and crib attachment.
 - Tool required for battery replacement: Phillips screwdriver (not included).


Battery Replacement

Before First Time Use: The soother includes four “AA” batteries in a disposable box for demonstration purposes only. Remove the disposable box with “AA” batteries and install four “C” (LR14) **alkaline** batteries.

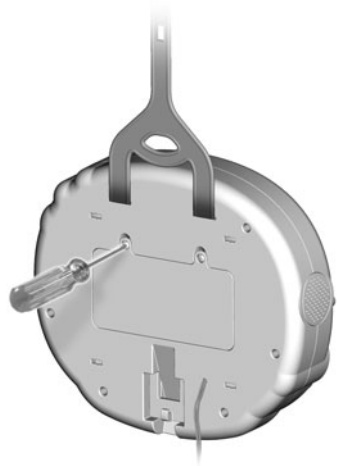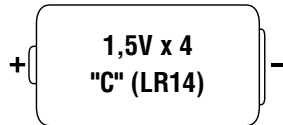


- Locate the battery compartment on the back of the soother.
- Loosen the screws in the battery compartment door and remove the door.

 Battery Replacement

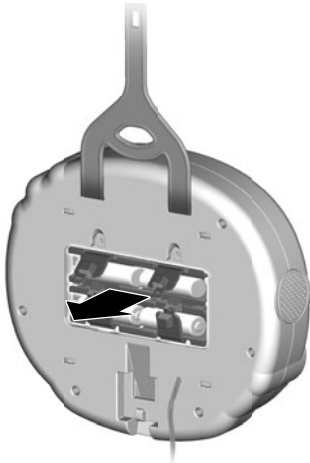

 -
- Open the tabs on the disposable box and lift to remove it.

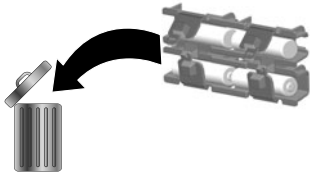

-
- Throw away the disposable box and the included “AA” batteries. Dispose of batteries safely.
 - Insert four, new “C” (LR14) **alkaline** batteries in the battery compartment.
- Hint:** We recommend **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screws.
- If the soother begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and then back on.

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.



CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)

1300 135 312 (Australia)



service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.

Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

 
Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

©2012 Mattel. All Rights Reserved.


Crib Attachment

IMPORTANT! Always attach all provided fasteners (strings, straps, clamps, etc.) tightly to a crib or playpen according to the instructions. Do not add additional strings or straps to attach to a crib. Check frequently.

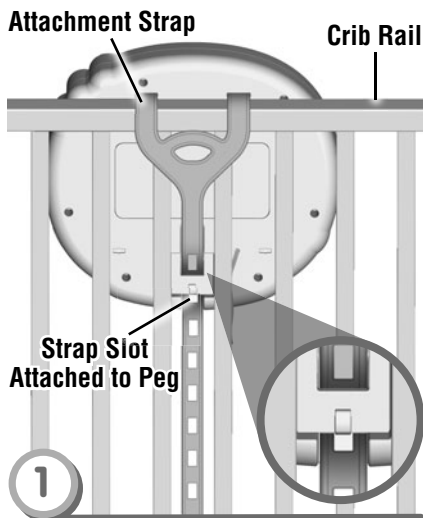


- Position the soother inside the crib.
- Wrap the attachment strap around the top of the crib rail.
- Slide the end of the attachment strap under the tab on the back of the soother.
- Fasten the attachment strap slot to the peg on the back of the soother.

 NOTE: This soother should be snug against the crib rail and spindles. Use the strap slot that provides the tightest fit.

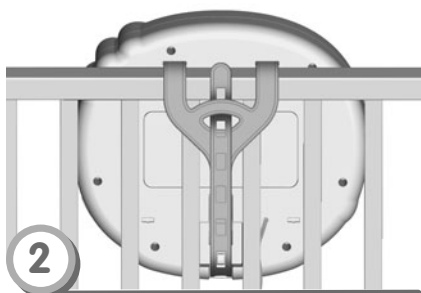


- If you have excess strap, slide the free end of the attachment strap under the slot at the top of the attachment strap.

 Crib Attachment

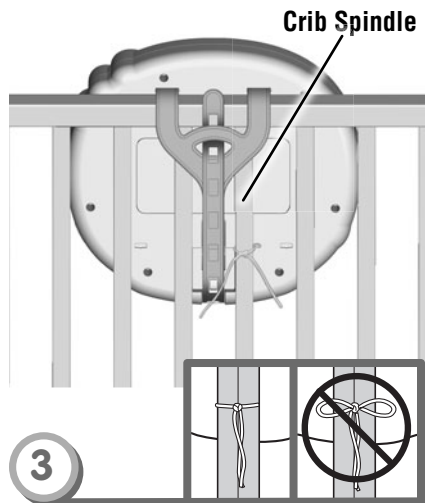


 - Tie the soother strings to a crib spindle.
NOTE: It is better to tie the strings in a knot than a bow, since a bow may be easily untied.

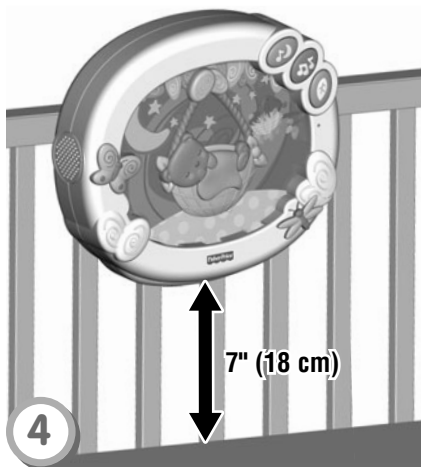

- Make sure the distance between the bottom of the soother and the crib mattress is **at least 7 inches (18 cm)**.
- If the distance is less than 7 inches (18 cm), readjust the attachment strap to lift the soother; or lower the crib mattress.

 Glowing Light & Soothing Sounds!

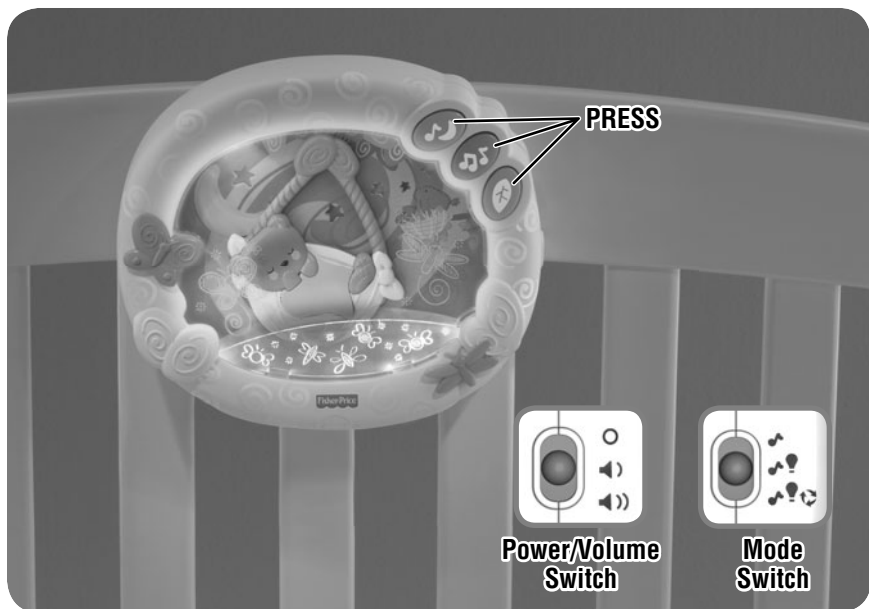

- Slide the power/volume switch to ON with low volume ◀▶ or ON with high volume ▶▶).
- Slide the mode switch to:
 - 🎵 **Music** - plays approximately 30 minutes of music.
 - 🎵💡 **Music & Lights** - plays approximately 20 minutes of music with glowing lights.
 - 🎵💡🔄 **Music, Lights & Motion** - plays approximately 10 minutes of music with lights and cradle rocking motion.
- Press a sound button to select nature sounds, lullabies or classical music. Press the same button again to change music or sounds.
- Press and hold a sound button to turn off sounds/music, lights or motion. Press a sound button again to restart.
- When you are finished using this product, slide the power/volume switch OFF ○.

Consumer Information

Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse.
- This toy has no consumer serviceable parts. Do not take this toy apart.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

ICES-003

- This Class B digital apparatus complies with Canadian ICES-003.
- Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

NMB-003

- Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.
- L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.