



Please keep this instruction sheet for future reference,
as it contains important information.


Adult assembly is required.

Requires two "AA" batteries (included).

Batteries included are for demonstration purposes only.

Tool required for assembly: Phillips screwdriver (not included).

Assembled Parts

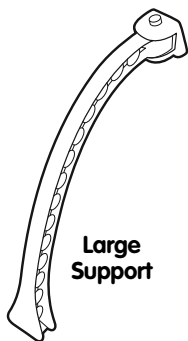


Large Support




Arch




2 Bases

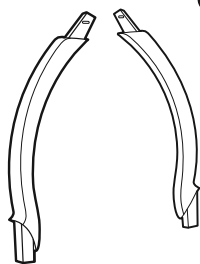

2 Small Supports

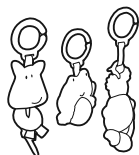

3 Hanging Toys

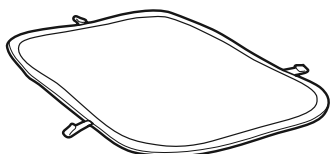

Mat




#6 x 1,9 cm Screw - 4

Screw shown actual size. Tighten all screws with a Phillips screwdriver. Do not over-tighten.

Assembly

⚠ CAUTION

This package contains small parts. For adult assembly only.

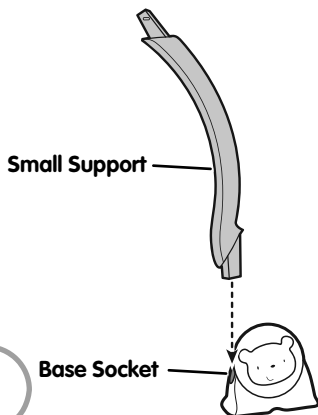


1

Base Socket

- Fit a small support into the socket in a base.

Hint: The small supports are designed to fit into the bases one way. If a support does not seem to fit, turn it around or try assembling it to the other base.

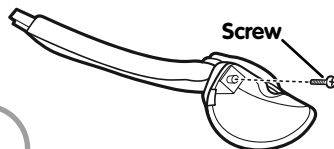


2

BOTTOM VIEW


- Insert a screw into the bottom of the base and tighten.
- Repeat this procedure to assemble the other small support and base.

Assembly

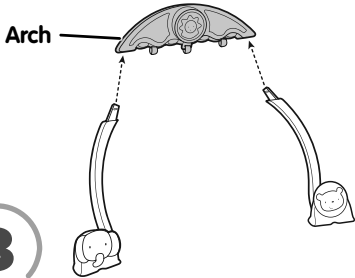


- Fit the ends of the small supports into the slots in the arch.


Hint: The small supports are designed to fit into the arch one way. If they do not seem to fit, turn the arch around and try again.

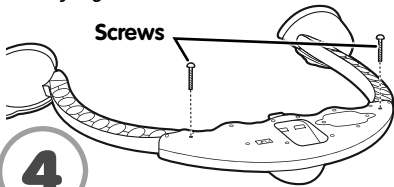


- Lay the assembly face down. Insert two screws into the arch and tighten.

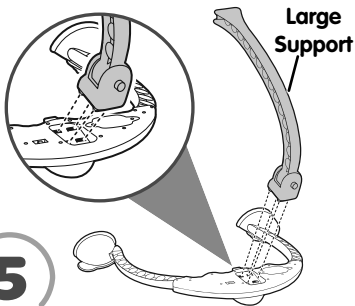

- Fit the tabs on the large support into the slots in the arch. Push to "snap" into place.

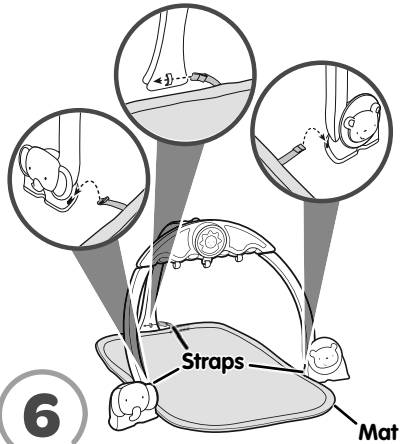

- Place the mat, decorated side up, between the bases and large support.
- Fit the straps on the mat through the slots in the support/bases. Make sure the tab on the end of each strap forms a "T" on the other side of each slot.
- Pull up on the mat to be sure all three straps are secured.

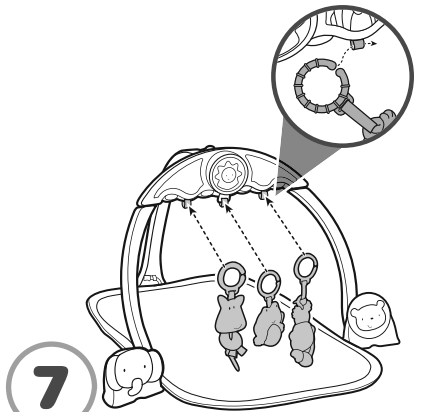

- 3** • Hook the toys to the loops on the arch.

Consumer Information

Care

- The mat is machine washable. Wash separately in cold water on the gentle cycle. Do not use bleach. Tumble dry on low.
- The frame and toys can be wiped with a clean, damp cloth. Do not immerse the frame.



Great Britain: Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303. www.service.mattel.com/uk.
Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.


Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service
1300 135 312.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Malaysia: Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 Tel: 03-78803817, Fax: 03-78803867.

Battery Replacement

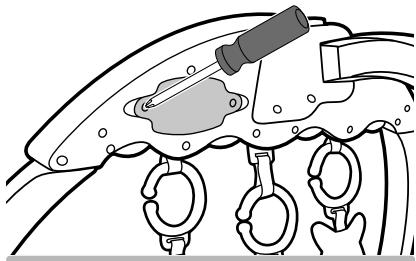


For best performance, we recommend replacing the batteries that came with this toy with two, new "AA" (LR6) alkaline batteries.

- Locate the battery compartment door on the back of the arch.
- Loosen the screws in the battery compartment door with a Phillips screwdriver and remove it.
- Remove the exhausted batteries and dispose of them properly. Insert two, new "AA" (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screws. Do not over-tighten.
- If this product begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and then back on.
- When sounds or lights become faint or stop, it's time for an adult to change the batteries.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

 Battery Safety Information



In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.


Musical Fun!

⚠ WARNING

To prevent entanglement injury, never place the gym in a crib or playpen. Never add strings, ties or other products to the gym.




Power/Volume Switch

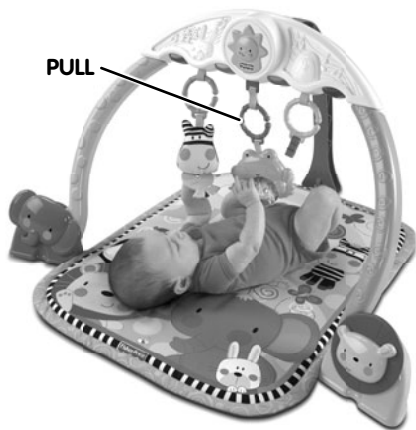




Storage

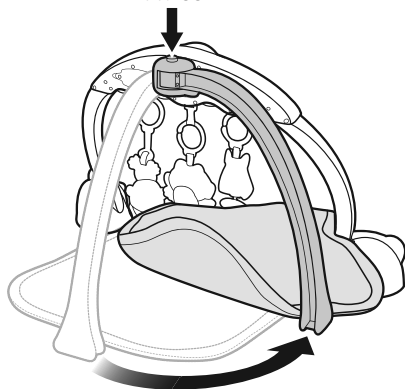PRESS



- Press the button on top of the large support and push toward the arch.

- Slide the power/volume switch on the arch to ON with low volume  or ON with high volume .
- Pull the centre toy on the arch for music and lights!
- When you are finished playing with this toy, slide the power/volume switch OFF .