

**Fisher-Price®**

Y3625



Please keep this instruction sheet for future reference,  
as it contains important information.

Requires four “AA” batteries for operation (included).  
Batteries included are for demonstration purposes only.

Adult assembly is required for crib attachment and battery replacement.

Tool required: Phillips screwdriver (not included).

 
To clean, wipe the surface of this toy with a damp cloth. Do not immerse this toy.

Do not drop this toy on a hard surface.

This toy has no consumer serviceable parts. Please do not take this toy apart.

**fisher-price.com**

## Battery Replacement

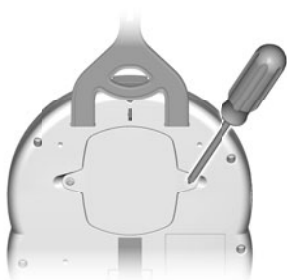


**For best performance, we recommend replacing the batteries that came with this toy with four, new “AA” (LR6) batteries.**

- Locate the battery compartment on the back of the toy.
- Loosen the screws in the battery compartment door with a Phillips screwdriver and remove the door. Remove the exhausted batteries and dispose of them properly.
- Insert four, new “AA” (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screws. Do not over-tighten.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and back on.
- If sounds or lights become faint or stop, it's time for an adult to change the batteries.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.
 
## Battery Safety Information



**In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:**

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

# Crib Attachment

## WARNING

 
### Prevent Entanglement Injury

- This product may not attach to all crib designs. Do not add additional strings or straps to attach to a crib or playpen.
- Use **ONLY** attached to a crib or playpen.

**IMPORTANT!** Always use the straps provided to attach this toy to a crib.



- Position the toy inside the crib.
- Wrap the toy's attachment strap around the crib top rail.

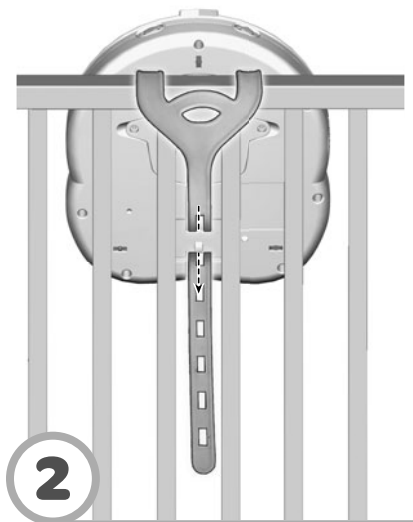


- Slide the end of the attachment strap through the slot on the back of the toy. Pull the end of the attachment strap up and fasten to the slot on the peg on the back of the toy.

**Note:** This toy should be snug against the crib rail and spindles. Use the strap slot that provides the tightest fit.



## Crib Attachment



 - If you have excess strap, slide the free end of the attachment strap under the slot at the top of the attachment strap.

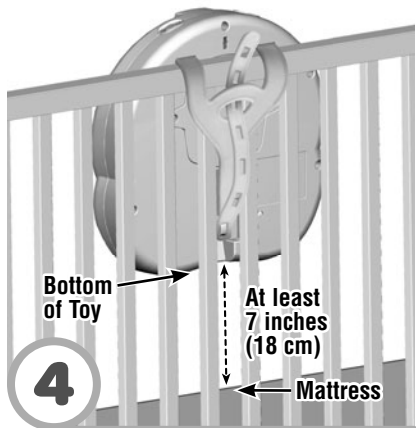

  - If the distance between the bottom of the toy and the mattress is less than 7 inches (18 cm), lower the crib mattress.

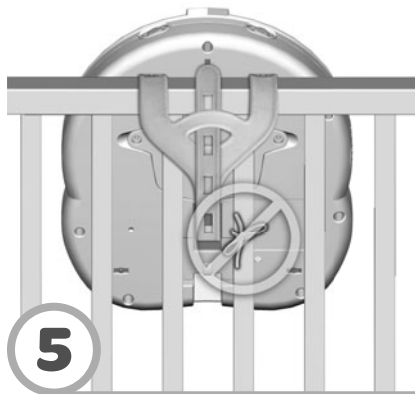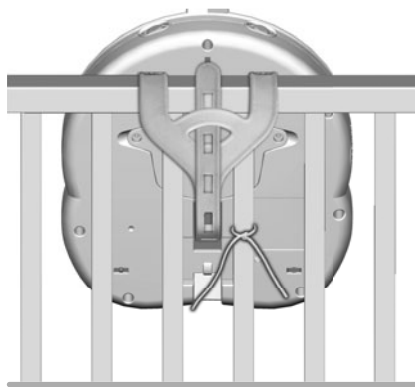

- Wrap the toy's strings around the crib spindles and tie in a knot.  
**Note:** It is better to tie the strings in a knot than a bow, since a bow may be easily untied.

# Gentle Soothing



## Power/Volume Switch

- Slide to ON with low volume ◀▶, ON with high volume ◀▶▶ or OFF ○.

## Mode Switch

- Slide to choose:
  - 🎵 **Music Only**  
Plays up to 20 minutes of lullabies.
  - 🎵💡 **Music and Lights**  
Plays music along with a light show.
  - 🌊💡 **Sounds and Lights**  
Plays ocean sounds and displays soothing lights.

**Hint:** This product automatically goes into sleep mode after approximately 20 minutes. Press the start button on the front of the toy to restart music/sounds/lights.



**CONSUMER ASSISTANCE**  
 1-800-432-5437 (US & Canada)  
 1300 135 312 (Australia)

**service.fisher-price.com**

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.  
 Hearing-impaired consumers: 1-800-382-7470.

**Outside the United States:**  
 Canada: Mattel Canada Inc., 6155 Freemont Blvd.,  
 Mississauga, Ontario L5R 3W2; www.service.mattel.com.  
 Great Britain: Mattel UK Ltd, Vanwall Business Park,  
 Maidenhead SL6 4UB. Helpline: 01628 500303.  
 www.service.mattel.com/uk  
 Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.  
 Australia: Mattel Australia Pty. Ltd., 658 Church Street,  
 Locked Bag #870, Richmond, Victoria 3121 Australia.  
 New Zealand: 16-18 William Pickering Drive,  
 Albany 1331, Auckland.

**FCC Statement (United States Only)**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

**ICES-003**

This Class B digital apparatus complies with Canadian ICES-003. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NMB-003**

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

© Disney/Pixar

©2012 Mattel. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, except as noted.