

**Fisher-Price®**

Y4234



**fisher-price.com**



## CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)  
1300 135 312 (Australia)



**service.fisher-price.com**

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.  
Hearing-impaired consumers: 1-800-382-7470.

### **Outside the United States:**

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,  
Mississauga, Ontario L5R 3W2; [www.service.mattel.com](http://www.service.mattel.com).

Great Britain: Mattel UK Ltd, Vanwall Business Park,  
Maidenhead SL6 4UB. Helpline: 01628 500303.  
[www.service.mattel.com/uk](http://www.service.mattel.com/uk)

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,  
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,  
Albany 1331, Auckland.


Apple, iPhone and iPod touch are trademarks of Apple Inc.,  
registered in the U.S. and other countries.  
App Store is a service mark of Apple Inc.

©2012 Mattel. All Rights Reserved. ® and ™ designate U.S.  
trademarks of Mattel, except as noted.

# Consumer Information

- Please keep these instructions for future reference, as they contain important information.
- Adult setup is required.
- This product is compatible with the iPhone® 3GS, iPhone 4/4S mobile digital device, iPod touch® device 4th generation. Device not included.
- Only use this product with your iPhone® or iPod® device properly inserted and locked in the case. Remove any other cases or bumpers from the device before inserting it in this case.
- This product contains a magnet (to interact with your iPhone or iPod device). Do not use around other items that are sensitive to or affected by magnetic fields.

# Setup

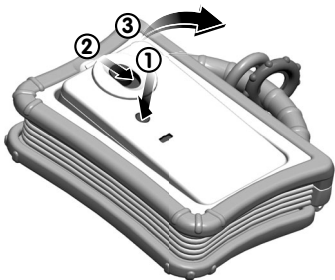

## BACK VIEW

---


- While pressing the button on the door ①, slide the release switch ② and lift the door ③.

# Setup



- 
- Pull the door to remove it.

# Setup

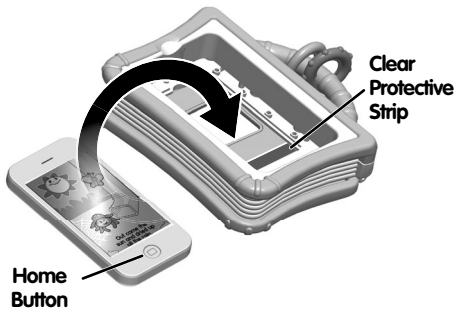


## BACK VIEW

---

**Hint:** If you'd like to **block** your child from pressing the home button, follow the instructions in this step.

- Turn your device power ON.
- Insert the device with the home button on the **same** side as the clear protective strip.

# Setup

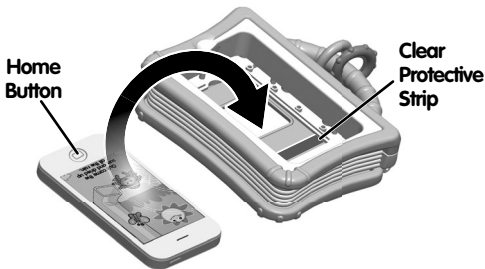


## BACK VIEW

---

**Hint:** If you'd like to allow your child to press the home button, follow the instructions in this step.

- Insert the device with the home button on the **opposite** side of the clear protective strip.


# Setup

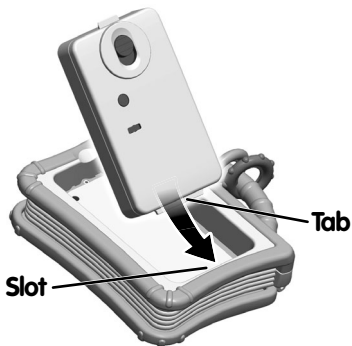

- 
- At an angle, fit the tab on the door into the slot in the case.



# Setup

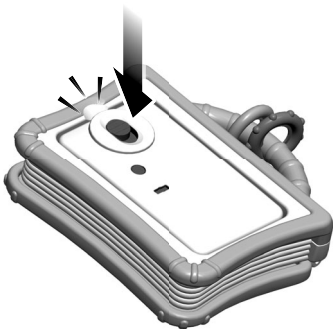

- 
- Push the door to lock in place. Make sure you hear a **"snap"**.

# Free Story Apps



- 
- Scan the QR code above with your iPod or iPhone to download our free Fisher-Price® story apps from the App Store<sup>SM</sup> (no purchase necessary) for interactive fun!

# Interactive Fun!



- Open and close the cover, or swipe the screen to turn the page in the story.
- Touch the screen to hear about things in the story.

# Care

- Periodically check this product and your device for damage or cracks. Do not use if either is damaged or broken. Follow your device's instructions for use and care.
- Wipe this product with a clean, damp cloth. Do not immerse.