

Little People™ Apptivity™ Barnyard FAQ

Thank you for downloading the Little People™ Apptivity™ Barnyard app. Here are answers to some Frequently Asked Questions that will help you and your child play with this app.

Troubleshooting

[Why does the app close unexpectedly?](#)

[Why should I turn off “Multitasking Gestures” before playing?](#)

[How do I adjust the volume without removing my iPad® from the Barnyard playset?](#)

[Can I return to the Home Screen without closing the app?](#)

[Why aren't the play pieces responding with the app?](#)

[What do I do if the app stops responding?](#)

[How do I access purchases that I have already made in the Little People™ Apptivity™ Barnyard app?](#)

[Where can I find more help?](#)

About this App

[What are the two ways to play with the app?](#)

[What can I play within this app?](#)

[What can I play after I purchase the Little People® Apptivity™ Barnyard playset?](#)

[How do I play with the Apptivity™ Barnyard playset features?](#)

[How do the Apptivity™ play pieces interact with the app?](#)

[How do I play the app without the play pieces?](#)

[How do I get to all of the places in the app?](#)

Troubleshooting

Why does the app close unexpectedly?


If the app closes unexpectedly, or if your child keeps exiting the app during play, be sure to turn OFF (disable) the Multitasking Gestures feature in the iPad® Settings (see below: [Why should I turn off “Multitasking Gestures” before playing?](#)).

Why should I turn off “Multitasking Gestures” before playing?

Most iPads® have a Multitasking Gestures setting, which allows you to use four- or five-finger swipes on the screen to switch between apps or pinch to return to the Home Screen.




To turn OFF (disable) this feature, go to Settings on the iPad® and touch General on the left side of the screen. Then, in the Multitasking Gestures tab, touch the switch to turn OFF this feature.

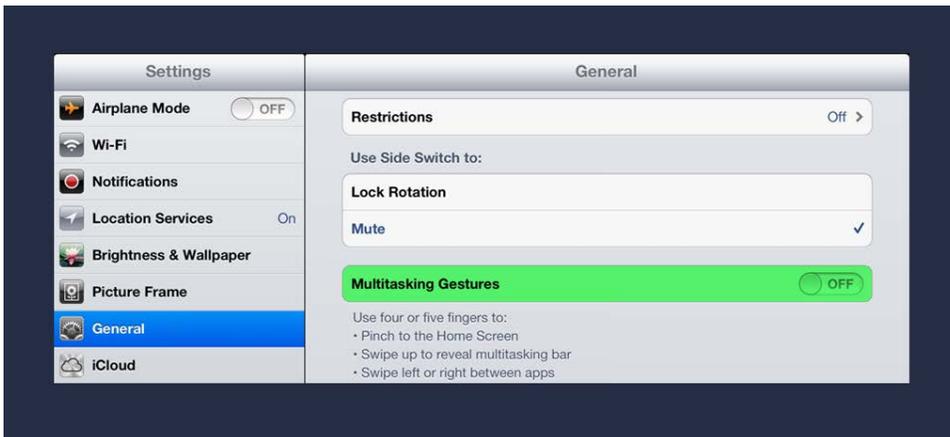

How do I adjust the volume without removing my iPad® from the Barnyard playset?



Touch the Settings/Info button in the lower right corner of the Home Screen. Use the slider to adjust the volume of the app.

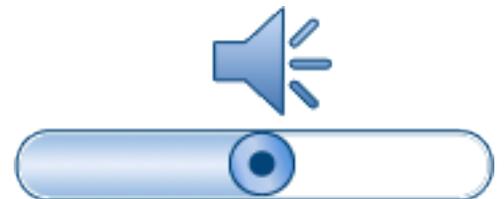

Can I return to the Home Screen without closing the app?

No, once you enter the game by touching one of the Play buttons, you cannot return to the Home Screen without first closing the app. To return to the Home Screen, simply exit the app by pressing



the home button on your iPad®, and then re-launch the app by touching the app icon.

Why aren't the play pieces responding with the app?

- Make sure the bottom of the play piece and the screen protector are clean.
 - **NOTE:** Do not use alcohol or ammonia based cleaners on the screen protector.
- Wipe the play piece with a clean cloth.
- Wipe the screen protector with a clean cloth.
- When playing the app, be sure to hold the play pieces flat on the screen (see below: [How do the Apptivity™ play pieces interact with the app?](#)).

What do I do if the app stops responding?

1. Close the app by pressing the Home Button on your iPad®.
2. Press and hold the Sleep/Wake button for a few seconds until the red "slide to power off" slider appears, and then slide the slider.
3. Press and hold the Sleep/Wake button until the Apple logo appears.



4. Re-launch the app by touching the app icon.

How do I access purchases that I have already made in the Little People™ Apptivity™ Barnyard app?

You can restore purchases in the Little People™ Apptivity™ Barnyard app that you have already

made with your Apple® ID. Touch the shopping cart button



from the Home Screen, then

touch [Restore Purchases](#) and enter your password.

Where can I find more help?

For more information and additional help, or to download the FAQ and instructions, please visit Fisher-Price® [Customer Service](#).

About this App

What are the two ways to play with the app?

There are two ways to play: with and without the Little People® Apptivity™ Barnyard playset (sold separately).

1. Play with playset

Install your iPad® in the Little People® Apptivity™ Barnyard playset (sold separately) and use the included play pieces to interact with the app.



2. Play without playset

Use the digital play pieces to play with the app.



What can I play within this app?

From the Home Screen, choose “Play without playset”. Use the digital play pieces to play in the Barnyard, Garden, and Market Stand.

There are more places to play in the app. If you touch the shopping cart button  from the Home Screen, you can buy more places, more animals, fruits and vegetables, and a sorting game that appears in Market Stand.

For the optimal play experience from the Little People™ Apptivity™ Barnyard app, be sure to play with the Little People® Apptivity™ Barnyard playset and play pieces (sold separately), which unlock more areas and activities, animals, fruits and vegetables. Your iPad® recognizes the play pieces and responds with sounds, phrases, music and more!

What can I play after I purchase the Little People® Apptivity™ Barnyard playset?

The playset comes with 6 interactive Apptivity™ pieces. The playset also has a clear, protective screen that helps keep your iPad® safe from drips, scratches, and sticky fingers.

There are 5 play places in the app: Barnyard, Barn, Garden, Market Stand, and Field.

- Plant and harvest crops, and then see them “grow”.
- Make the water from the well “overflow”; then draw in the mud.
- Open the barn door to watch precious baby animals come out.
- Take Eddie for a tractor ride to visit his friends!
- Count and sort fruits and vegetables at the farmer’s market.
- Nurture baby animals inside of the barn and tuck them in for a good night’s rest.

Place your iPad® in the Little People® Apptivity™ Barnyard playset and choose to “Play with playset”. Follow the onscreen prompt to access all of the additional areas and activities, interact with more animals, as well as grow lots of fruits and vegetables.

How do I play with the Apptivity™ Barnyard playset features?



Baby Door: Open the baby door in any area of the game to see digital baby animals enter the area. The baby animals may change in different areas of the game.



Feed Bin: Press the button on the feed bin, and food will dispense in the game. Digital animals will come over to eat the food, or use the Cow or Pig play pieces to eat it.

Water Well: Press the water pump to hear splashing sounds. In some areas, the water reacts differently – press three times to see what happens!



How do the Apptivity™ play pieces interact with the app?

Tessa, Eddie and Tractor, Cow and Pig: Hold the toy flat on the iPad® screen and listen to each speak along with sound effects. Use the play pieces to interact with the app.

Use any of the play pieces in the Field area to move through the scrolling area.



Rake: Hold the rake as shown. In the Garden, use the rake to till the dirt.



Watering Can: Hold the watering can as shown. Make sure that the nozzle is flat on the screen. In the Garden, use the watering can to water the seeds.



How do I play the app without the play pieces?

When playing without the playset, use your finger to touch and interact with objects in the game.

In each of the places to play in the app, there are digital play pieces, just like the play pieces included with the playset.

How do I get to all of the places in the app?

There are 5 places to play. The app always starts in the Barnyard. You can also go to the Barn, Garden, Market Stand, and Field.



Touch the wooden sign in the top left corner of the iPad® screen to see a full menu of signs for all of the places to play. Touch a sign to go to another place to play. To make the menu disappear, touch the wooden sign in the top left corner of the iPad® screen again.

If you have chosen “Play without playset”, and are unable to go to the Barn and the Field, you can

buy these places by touching the shopping cart button  from the Home Screen.

