

Barbie

Fits child's shoe size	US	UK
	6-12	5-11



Please save this instruction sheet for future reference, as it contains important information.

Adult supervision is required.

Wheel and size adjustments should be done by an adult.

Age 2-5 years.

The skates are designed to be worn on either foot.

Protective equipment shown in this photo is not included with this toy.

www.fisher-price.com

Safety Information

 
⚠ WARNING

Protective equipment should be worn. Use helmet, wrist guards, knee pads and elbow pads (all not included). Not for children with a body weight of more than 44 lbs. (20 kg).

IMPORTANT! Please take a moment to review the following safety tips with your skater.

- Always wear a helmet, knee pads, wrist guards and elbow pads to guard against bumps and bruises (all not included).
- Wear shoes or sneakers, not open-toe shoes.
- Keep loose pant legs away from the wheels.
- Beginner skaters should be supervised. Hold the beginner's hand and guide the new skater along a smooth, level surface.
- Learn how to brake and stop safely in these skates.
- Choose areas for skating which are free of obstacles.
- Never skate in areas with water, wet spots, snow, ice, sand, oil, gravel etc.
- Never skate on streets, roadways and driveways which enter vehicle traffic routes.
- Towing skaters with bicycles or cars is unsafe.
- Never skate at night.
- Do not skate down hills. Braking is gradual with these skates. Keep this in mind to allow enough stopping distance.
- Please use with caution, as this product requires skill to operate safely. Avoid falls, collisions, and injuries to yourself and others.
- Before skating, check to be sure all wheels, the brake, straps and other plastic parts are not loose, cracked, broken or worn out. Tighten all parts as necessary. If any parts are cracked, broken or worn out, discard the skates.

Wheel Control Adjustment

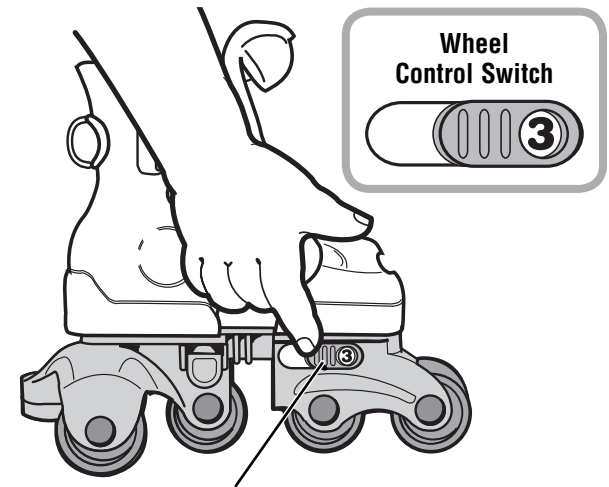

Wheel Control Switch

- Locate the wheel control switch on the side of the skate.
- Press and slide the wheel control switch to:



FULL STOP (WALK)

The second wheel completely locks. Your skater can walk on the skates to get used to them.



FORWARD ONLY

Your skater can roll forward. The second wheel locks to prevent the wheel from rolling backward. It is normal to hear a clicking sound in this mode.



FREE WHEELING

Your skater can roll forward and backward unrestricted.

- Make sure both skates are set to the same wheel control position.
- The wheel control function works only when your child is wearing and putting weight on the skate.

IMPORTANT! Your child must first learn how to stop using the heel brake in Forward Only and Free Wheeling modes. While leaning forward, bend at the knees and tilt a skate, toe up. Apply pressure to the heel brake. The heel brake stops your skater gradually. **Please be sure your skater keeps this in mind and always allows enough stopping distance.**

Consumer Information

Care

- Periodically lubricate the rear axle on each skate with a little petroleum jelly.
- Check plastic parts on a regular basis and discard if broken or cracked.

 
Helmet Information

Your child must always wear a bicycle helmet when using this product. Helmets reduce the energy of some impacts, minimizing or preventing head injuries. Make sure your child's helmet has a label stating/certifying conformance with the applicable certifying agency and includes the intended age requirement for use with a child. In addition, children ages 1 to 5 years require helmets specifically designed and labeled for younger children. These helmets cover a larger portion of the head and provide more protective coverage than other helmets for older persons.


For maximum protection during an impact, the helmet must be properly secured to your child's head. The helmet must have a strap that goes under the chin with a buckle that stays securely fastened. The helmet should be worn level/low on the forehead, not tilted back. The chinstrap should be adjusted so there is no slack and it is firmly buckled (see helmet instructions). After securing the helmet to your child's head, test to be sure that the strap stays tight, the buckle remains secure and the helmet cannot be removed from your child's head by twisting or pulling the helmet. Remind your child to remove the helmet when playing on any kind of playground equipment or any place where the helmet may present a risk of strangulation.

If the helmet is involved in a crash, replace it or have it examined by the manufacturer before reuse.


Fitting the Skates

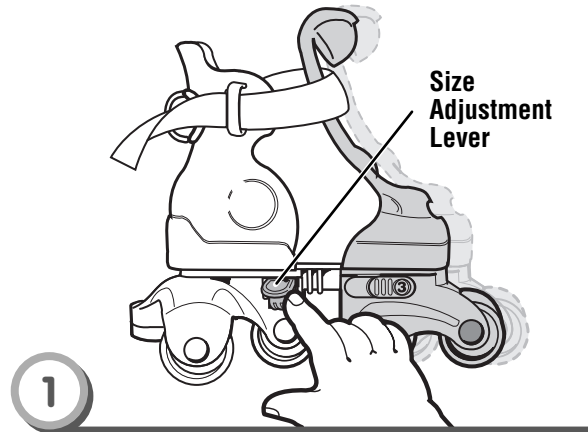

 1. Lift the size adjustment lever.
2. Pull the front of the skate to the fully extended position.
3. Repeat this procedure to open the other skate to the fully extended position.

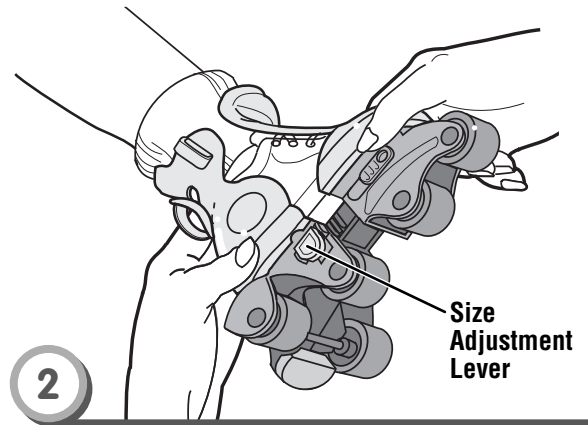

 4. Make sure your child is seated.
5. Place your child's foot in the skate.
6. Push the front of the skate to shorten it to the appropriate size for your child.
7. Press the size adjustment lever down until it "snaps" into place.
8. Adjust the size of the other skate to your child's other foot.

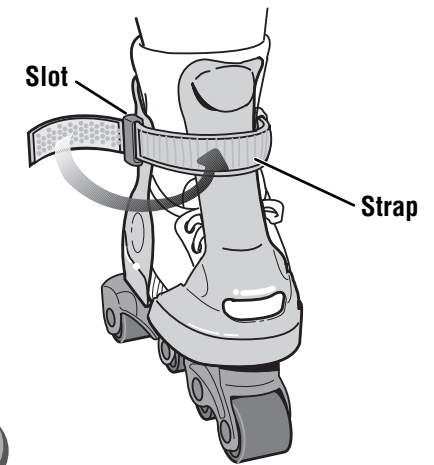

9. Insert the strap into the slot on the side of each skate.
10. Pull the strap tight and fold it back to fasten for a secure fit. Repeat this procedure to fasten the strap on the other skate.

CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa, B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

BARBIE and associated trademarks and trade dress are owned by Mattel, Inc.

Fisher Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

©2010 Mattel, Inc. All Rights Reserved. © and ™ designate U.S. trademarks of Mattel, Inc.

PRINTED IN CHINA

G7466c-0920