



 
 
Please keep this instruction sheet for future reference, as it contains important information.

Requires three "AAA" batteries (included) for operation.

Adult assembly is required for battery replacement.

Tool required for battery replacement: Phillips screwdriver (not included).

Battery Replacement

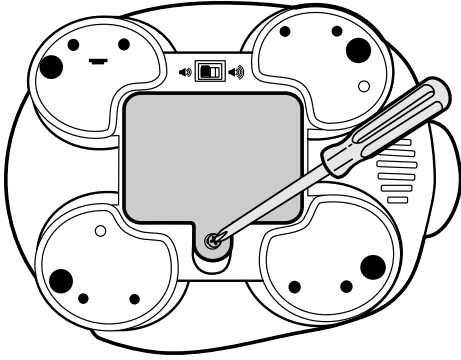

For best performance, we recommend replacing the batteries that came with this toy with three, new "AAA" (LR03) alkaline batteries.

- Locate the battery compartment door on the bottom of the toy.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Remove the exhausted batteries and throw them away.
- Insert three, new "AAA" (LR03) **alkaline** batteries, as indicated inside the battery compartment.

Hint: We recommend using **alkaline** batteries for longer battery life.

 
 
- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.
- If this toy begins to operate erratically you may need to reset the electronics. Slide the power/mode switch off and then back on.
- When sounds from this toy become faint or stop, it's time for an adult to change the batteries.



Battery Safety Information

 
In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

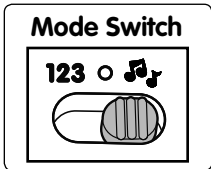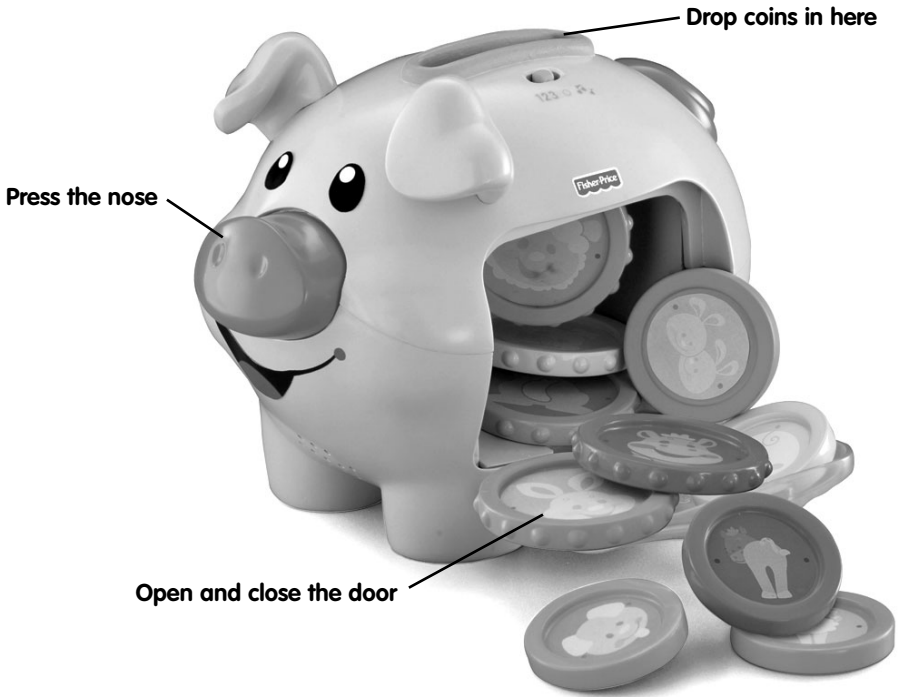

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Two Interactive Play Modes!

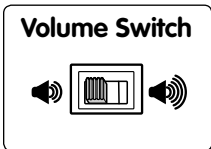

- Locate the power/mode switch on the top of the toy.
- Slide the power/mode switch to **123** learning mode or  music mode.
- When your child is finished playing, slide the power/mode switch  OFF.



- Slide the volume switch under the toy to high  or low  volume.

123 Learning Mode

- Press the pig's nose to hear a fun song or sound effect.
- Drop "coins" in the slot to hear them counted as well as fun music and sound effects.
- Open and close the door to learn "open" and "close."

Music Mode

- Press the pig's nose to hear a fun song or sound effect.
- Drop "coins" in the slot to hear sound effects and a short ditty.
- Open and close the door to to hear more fun sound effects.

Care



- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

Great Britain: Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303. www.service.mattel.com/uk.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Malaysia: Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel: +603-3341 9052. Mattel Europa, B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.