



Please Note

When pressing the manger, you may notice that you still hear sounds but the stable light turns on only briefly or not at all. When this happens, it's time for an adult to replace the batteries. Replace with three, new "AA" (LR6) **alkaline** batteries.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.
©2011 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.