

Fisher-Price®




fisher-price.com


Consumer Information

- Please keep these instructions for future reference, as they contain important information.
- Adult setup is required.
- This product is compatible with the iPhone®, iPhone 3G, 3GS, iPhone 4/4S mobile digital device, iPod touch® device 2nd, 3rd and 4th generation. Device not included.
- Only use this product with your iPhone® or iPod® device properly inserted and locked in the case. Remove any other cases or bumpers from the device before inserting it in this case.
- Periodically check this product and your device for damage or cracks. Do not use if either is damaged or broken. Follow your device's instructions for use and care.
- Wipe this product with a clean, damp cloth. Do not immerse.


Setup

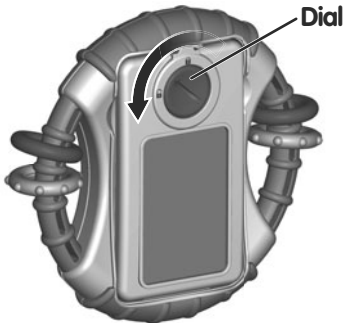

BACK VIEW


- Turn the door dial to the  unlock position.

Setup

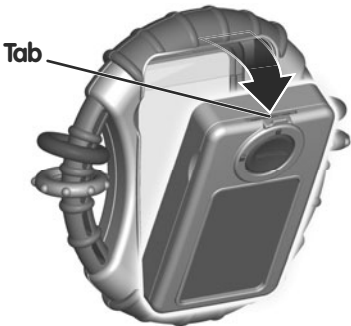

-
- Pull the tab on the door to remove it.

Setup

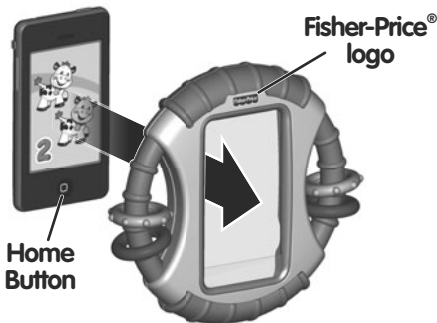


FRONT VIEW

-
- Turn your device power ON.
 - Position the case with the Fisher-Price® logo upright.
 - Insert the device, with the home button down, inside the case.

Hint: This will prevent baby from pressing the home button!


Setup

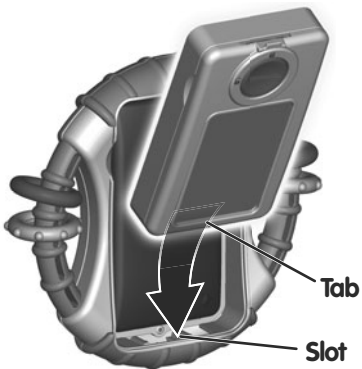

-
- At an angle, fit the tab on the door into the slot in the case.

Setup



-
- Turn the door dial to the  lock position.

Free Laugh & Learn™ Apps



- You can download free Fisher-Price® learning apps from the App StoreSM (no purchase necessary!).

Baby Appropriate Play!



- Remove your device and baby can play with the busy beads and mirror!



CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)

1300 135 312 (Australia)

 service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.

Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

Apple, iPhone and iPod touch are trademarks of Apple Inc.,
registered in the U.S. and other countries.
App Store is a service mark of Apple Inc.

©2012 Mattel. All Rights Reserved. ® and ™ designate
U.S. trademarks of Mattel, except as noted.