

Fisher-Price®

W9909



Please keep this instruction sheet for future reference,
as it contains important information.

Adult assembly is required. Tool required for assembly:
Phillips screwdriver (not included)


Wipe this toy with a clean damp cloth. Do not immerse.
This toy has no consumer serviceable parts. Do not take apart.

fisher-price.com

Assembly

⚠ CAUTION

This package contains small parts. For adult assembly only.

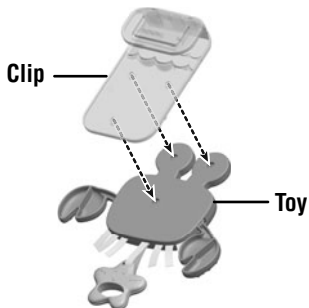


1


Back View

- Align the holes on the clip with the holes on the back of the toy.

Screws

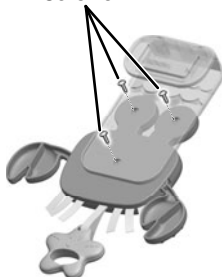

2

 

- Insert three M3,5 x 12 mm screws into clip and tighten. Do not over-tighten.

Attaching to a Playpen

WARNING

Prevent Entanglement Injury

Do not add additional strings or straps to attach to a playpen.



- Slide the toy onto the play yard wall. Push down to be sure it is completely attached.



CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)

1300 135 312 (Australia)



service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.

Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.

www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.